



Modbus HM-35 Converter Setup


1. Open  setup program. Setup com port

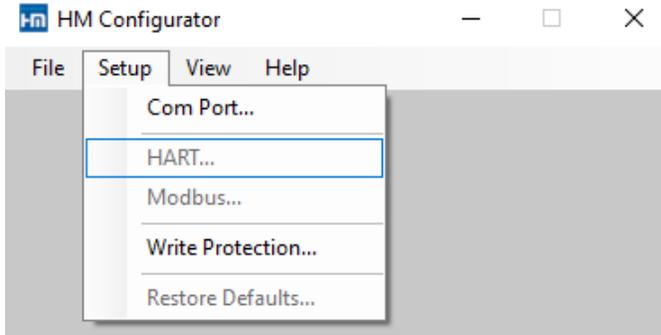


2. Select correct com port option.

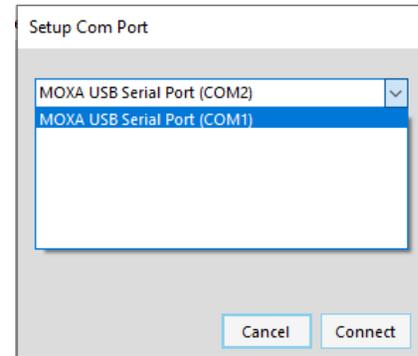

3. Selecting 'Connect' starts a search for a connected HM Configurator and displays the unit's configuration once it is detected.

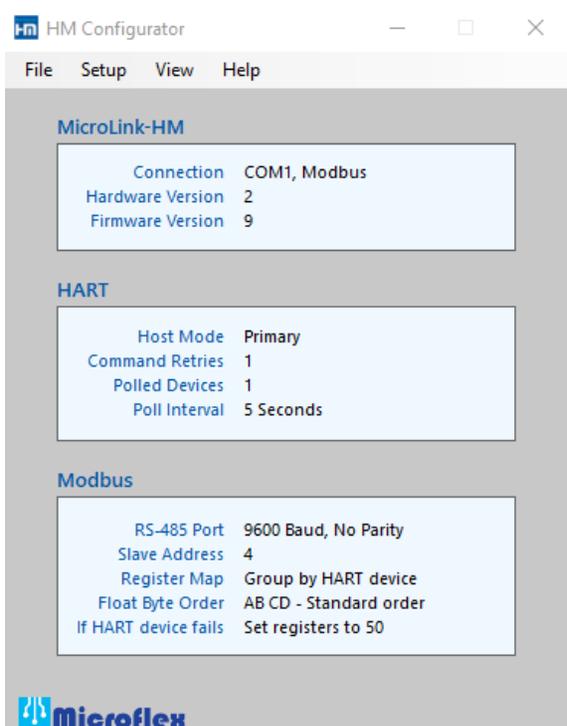


4. Set up Hart configuration

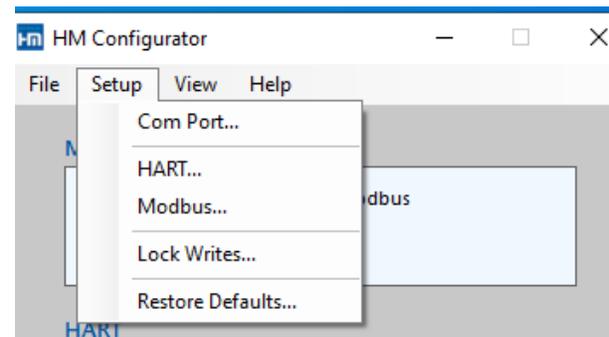


Modbus HM-35 Converter Setup


5. Configure devices and PV's

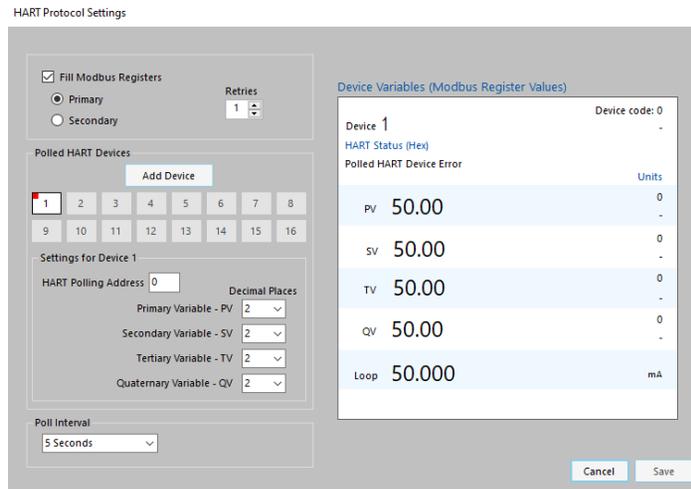


6. Configure Modbus settings

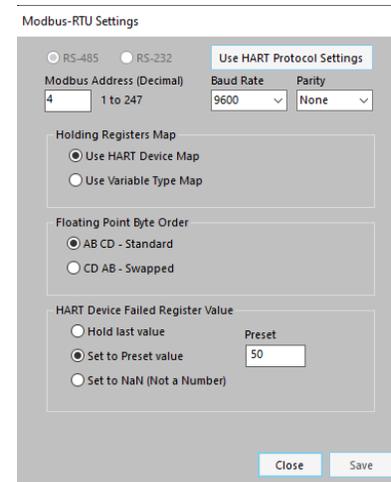

7. View Modbus Register Maps

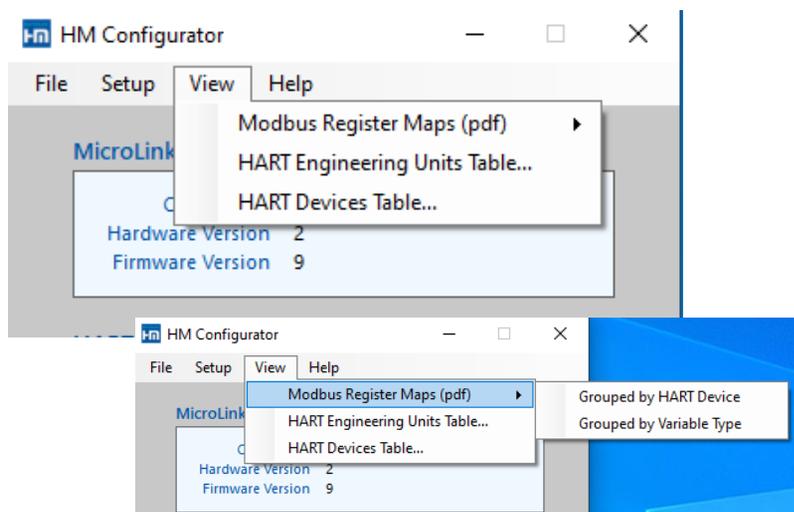

8. Opening the PDF displays the register map for up to 16 devices. The HM-35 maps both 16-bit unsigned and floating-point registers for each device's PV values, based on its device ID.

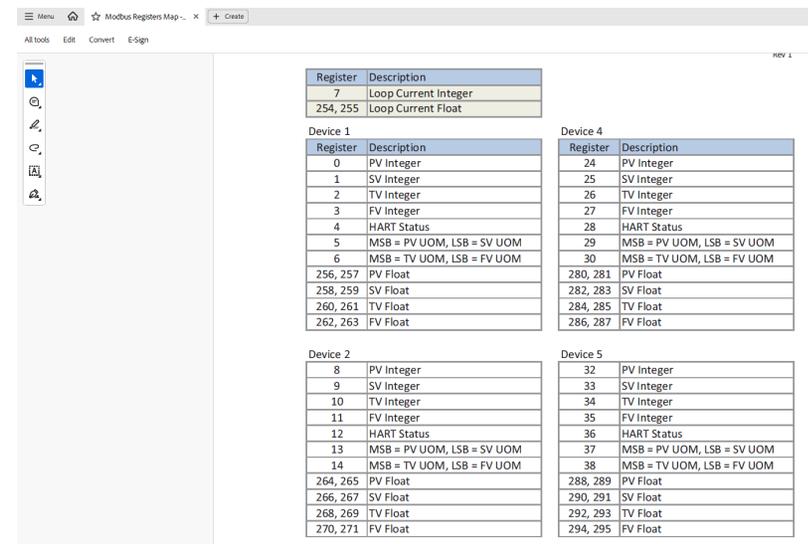

9. Disconnect the HM-35 from the configuration software and connect it to the PLC via the RS485 port.