#29009


# INSTALLATION INSTRUCTIONS FOR CODED AUTO SET PORTION CONTROLS CCUSA ITEM NUMBERS 15360, 15361, & 19226 FOR DOLE SABRE VALVE

The coded auto set portion control operates on 24 volts AC. The control is adaptable to both SEV and FFV Selmix Dole Sabre Valves.

### INSTALLATION:

2

- 1. Remove the front cover from the valve;
- Remove the rear cover by loosening the screw at the front top portion of the rear cover and then lift up on the rear cover;
- Disconnect the valve 24 volt A.C. electrical connector (white plug) from the dispensing valve connector;
- 4. Remove the entire valve wiring harness from the dispensing valve (valve lever and micro switch can be removed if desired);
- 5. Attached the portion control wiring as shown in Figures 1 or 2.
- Connect the 24 volt A.C. connector from the portion control to the connector on the dispenser;
- Place the rear cover on the valve and tighten the screw at the front of the rear cover;
- 8. Place the coded auto set portion control front cover on the front of the rear cover. Snap the front cover into the rear cover at the bottom of the front cover.

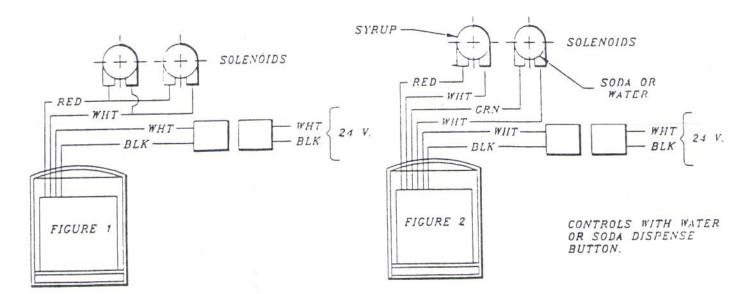



# ADJUSTMENT PROCEDURE FOR CODED AUTOSET PORTION CONTROL WITHOUT TOP OFF FEATURE

The following are instructions for adjusting the Coded Autoset Portion Control for size of drinks dispensed. Retain these instructions as part of your equipment manual.

## ADJUSTING PORTION CONTROL FOR SIZE OF DRINKS DISPENSED

1)	Simultaneously, press and hold	push button switches on
	Coded Autoset Portion Control	Module until LED light in center of module starts
	blinking, then release switches.	Blinking LED indicates set mode is active.

- Put desired amount of ice in cup, place cup under valve and push selected size button (small, medium, large, or extra large). Hold button in until cup fills to desired portion then release button. Repeat the above procedure for remaining sizes.
- 3) After programming all drinks sizes, press and release "CANCEL/POUR" 

  to return the Coded Autoset Portion Control to the operational mode. Blinking LED light will go out.

If at a future date, it is decided to change portion size of the drinks, the individual sizes can be adjusted by the above procedure. It is not necessary to reprogram every size.

### CANCEL/POUR:

- Push and release to cancel or stop valve dispensing;
- Push and hold for continuous pour;

The portion control has a full memory retention when programing and in case of power failure.

IMI CORNELIUS COMPANY · P.O. BOX 1527 · MASON CITY, IOWA 50402 AC 515-424-9324 · TOLL FREE 1-800-531-5767 · FAX 515-424-3601