



 


ADJUSTMENT PROCEDURE CODED AUTOSET PORTION CONTROL WITH TOP OFF FEATURE

NEW INSTALL PROCEDURE:



- 1) Simultaneously, press and hold     push button switches on Coded Autoset Portion Control Module until LED light in center of module starts blinking, then release switches. Blinking LED indicates set mode is active.
- 2) Put desired amount of ice in cup, place cup under valve and push selected size button (small, medium, large, or extra large). Hold button in until cup fills to desired portion then release button.
- 3) Wait for foam to settle then actuate button again to top off.
- 4) Repeat steps 2 and 3 for remaining drink sizes.
- 5) After programming all drinks sizes, press and release "CANCEL/POUR"  to return the Coded Autoset Portion Control to the operational mode. Blinking LED light will go out.
- 6) Repeat steps 1 thru 5 for remaining valves.

ALTERNATE PROCEDURE:

NOTE: IF TOP OFF IS NOT DESIRED OR REQUIRED, THE FOLLOWING STEPS MUST BE FOLLOWED:

- A) *Follow steps 1 and 2.*
- B) *Repeat step 2 for remaining drink sizes.*
- C) *After actuating the last selected size button, momentarily actuate one of the other size buttons. This will signal the microprocessor that all selected sizes are completed. Failure to do this will signal an incomplete response back to the microprocessor and the last selected size will revert back to its previous program.*
- D) *Repeat steps A, B, and C for remaining valves.*

TO CHANGE DISPENSE SIZE:

Use one of the above procedures; it is not necessary to reprogram every size.

TO ADD OR DELETE THE TOP OFF FEATURE:

Use the new install procedure to add; use the alternate procedure to delete.

CANCEL/POUR:

- 1) Push and release to cancel or stop valve dispensing;
- 2) Push and hold for continuous pour;


The portion control has a full memory retention when programming and in case of power failure.

**INSTALLATION INSTRUCTIONS
FOR
CODED AUTO SET PORTION CONTROLS
CCUSA ITEM NUMBERS 15360, 15361, & 19226
FOR DOLE SABRE VALVE**

The coded auto set portion control operates on 24 volts AC. The control is adaptable to both SEV and FFV Selmix Dole Sabre Valves.

INSTALLATION:

1. Remove the front cover from the valve;
2. Remove the rear cover by loosening the screw at the front top portion of the rear cover and then lift up on the rear cover;
3. Disconnect the valve 24 volt A.C. electrical connector (white plug) from the dispensing valve connector;
4. Remove the entire valve wiring harness from the dispensing valve (valve lever and micro switch can be removed if desired);
5. Attached the portion control wiring as shown in Figures 1 or 2.
6. Connect the 24 volt A.C. connector from the portion control to the connector on the dispenser;
7. Place the rear cover on the valve and tighten the screw at the front of the rear cover;
8. Place the coded auto set portion control front cover on the front of the rear cover. Snap the front cover into the rear cover at the bottom of the front cover.

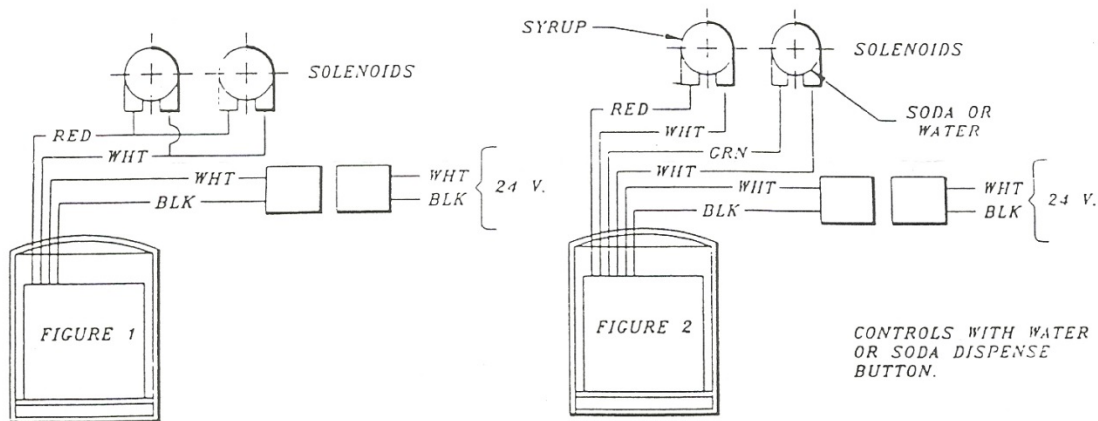

LL031

50-0023-003 REV B